



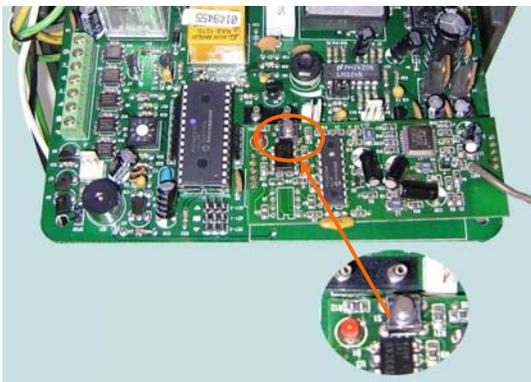

Caution: Always disconnect power before making any setting changes

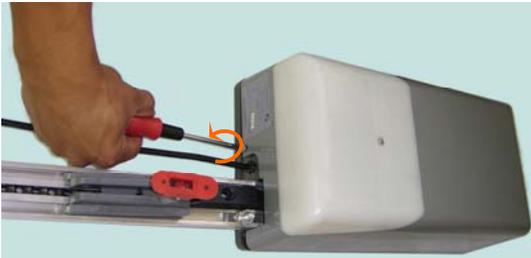

Title: GTS – CODE HANDSET TO RECEIVER

1. Remove or loosen the screw on the GTS cover using screw driver

2. Remove the GTS cover by pulling in the directions of arrows as shown in the figure

3. Press the LEARN button on receiver once
(located on receiver board as shown)

- A red light will illuminate on the receiver board

Note: The receiver picture may vary depending on the model of the receiver compare to the picture shown in the figure

4. Press and hold large button on the handset once until red-light on receiver board turns off

- This confirms that the handset is programmed (Always use the large button for coding, even if configured to use small buttons for normal operation)

Note: To reset the receiver press and hold the learn button (2.) for 12 seconds. This will erase all handsets from the memory. This is recommended if a remote has been lost or stolen. Any other handsets previously used will need to be reprogrammed by following steps 1, 2 and 3 above.