


The Drum Adapter is required where the internal door spokes do not contact the drive fingers on the Merlin Roller Door Opener.

### Note

These instructions assume that the door has been either removed from the door opening or that sufficient clearance from the wall exists once the support bracket has been removed.

### Warning

Disconnect power to the garage door opener before beginning installation.

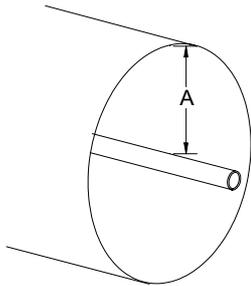


#### Step 1 – Measure

Measure the internal distance of the roller drum as shown. (From the surface of the shaft to the inside surface of the drum.) This is dimension A.


#### Step 2 – Mark

Mark that measured distance A onto each arm of the Drum Adapter. Mark a second line approximately 6 mm closer to the centre from each line.

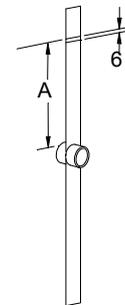

#### Step 3 – Bend


Bend each of the Drum Adapter arms to a right angle on the inside marks.

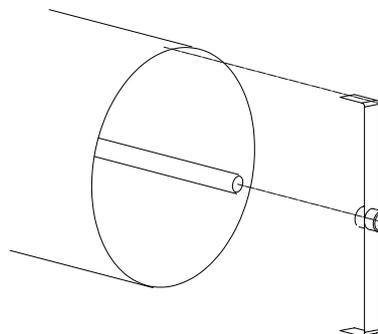

#### Step 4 – Install

Slide the Drum Adapter over the shaft and into the drum. Drill through both the drum and the arms of the adapter.

Screw or pop-rivet the arms to the drum using at least two fasteners per arm.

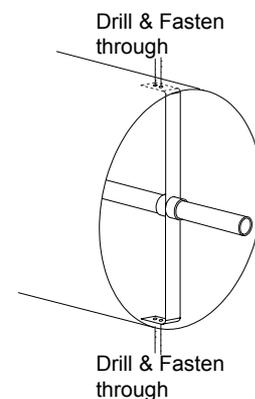

The door should now be able to be driven using the standard drive mechanism.

If you have any difficulties, phone your Merlin Distributor for assistance.